



Installation Example: FX-Loop between tonestack and master volume. Other configurations are possible as long as the maximum signal level won't be exceeded.

Input:
Use Input InA for Signal levels from 30 - 60 Vpp or Input InB for signal levels from 10 - 15 Vpp.

Integration and use at your own risk.
No responsibility can be taken for damages caused by wrong assembly or misuse of the loop. Implementing should only be made by skilled personnel.

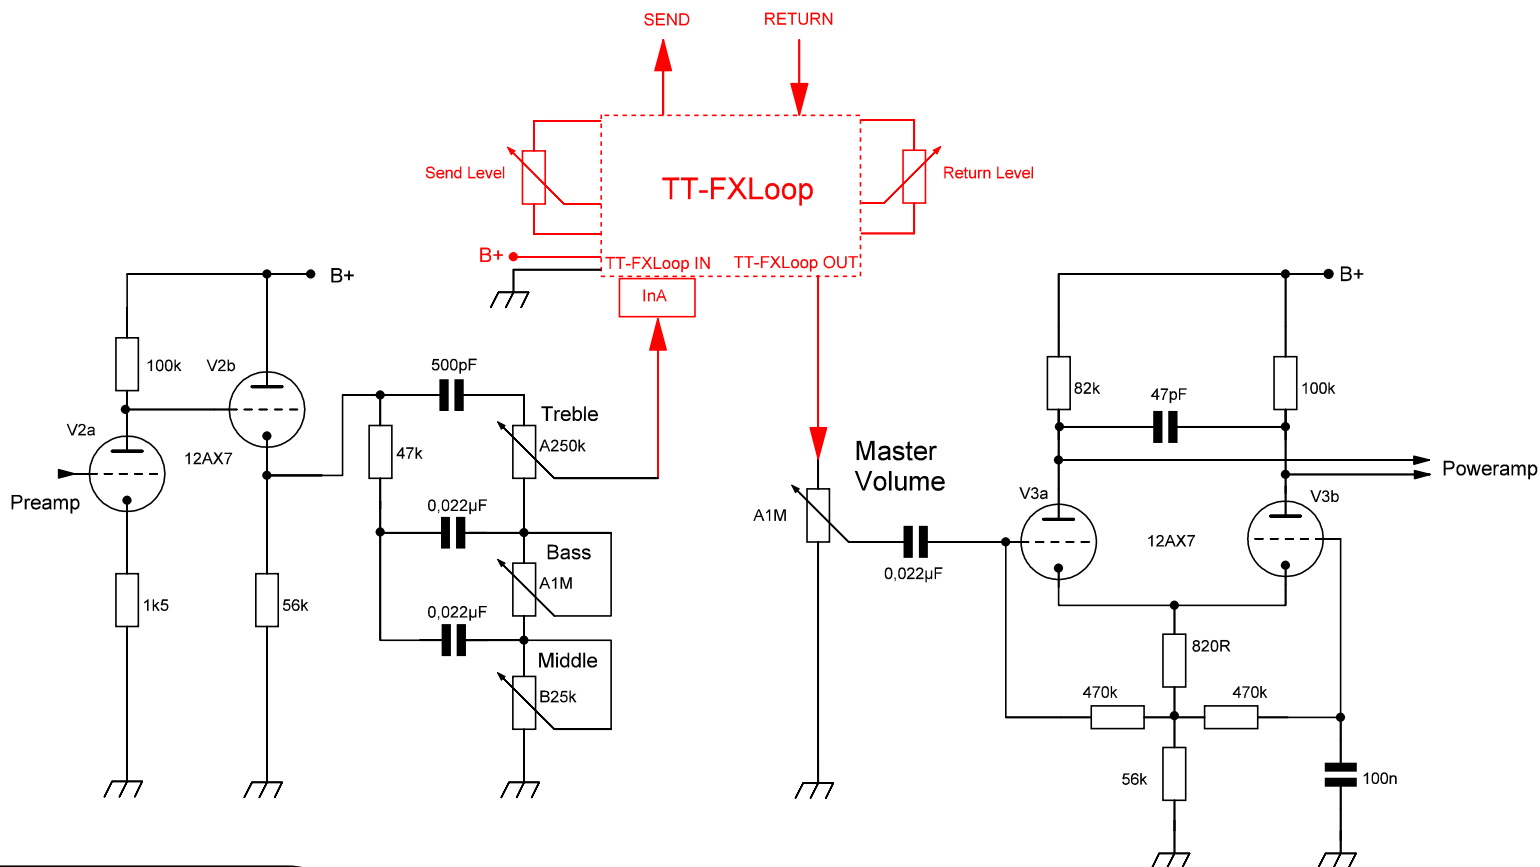

Original schematic Marshall 18Watt without loop

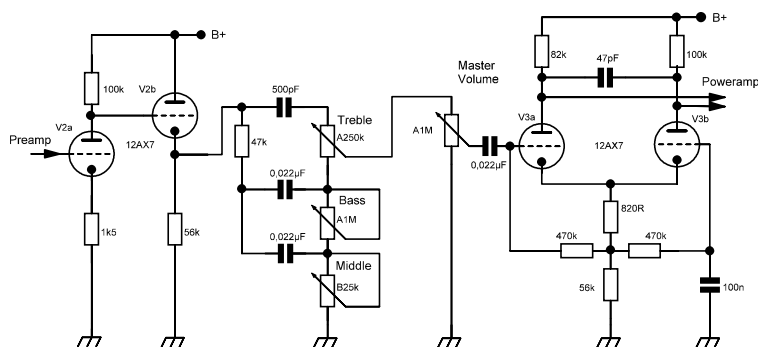

Änderungen

Bezeichnung: TT-FXLoop-6112 insert example

Datum: 02/2013

Name:

Zeichnungs-Nr.:

Blatt 4 von 8

